




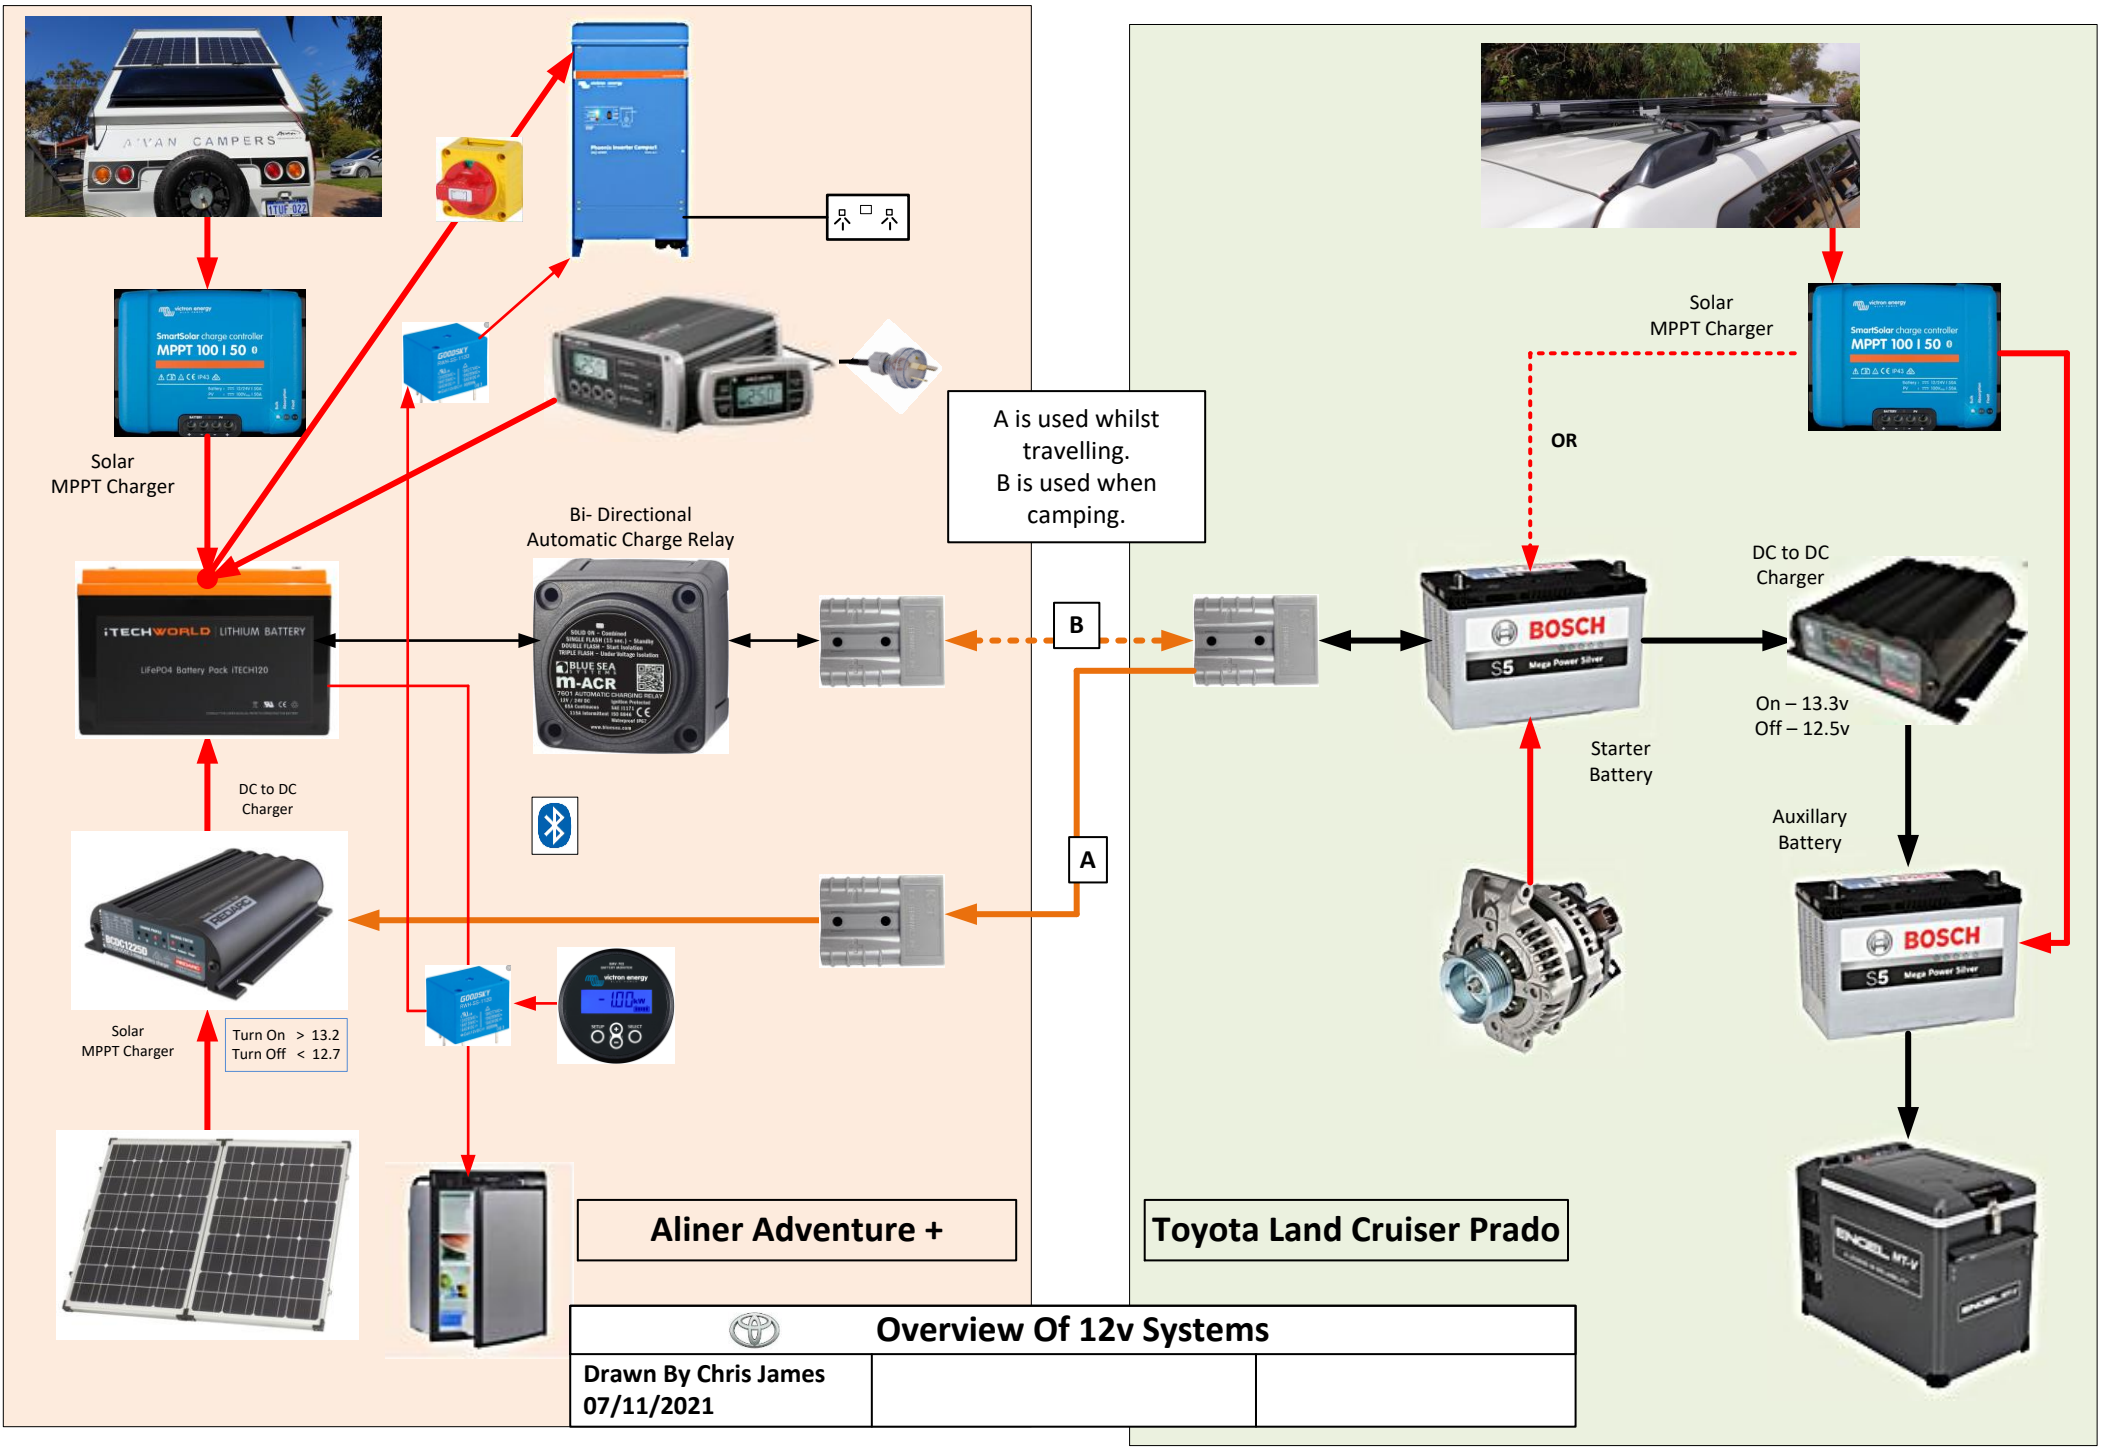

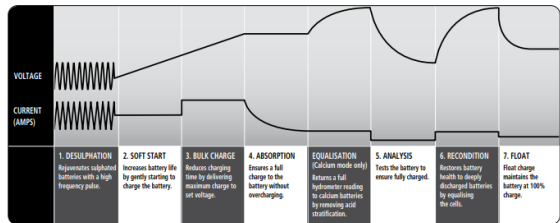


Charging LED	Battery Type LED	Charging Stage
GREEN Flashing	Solid BLUE	Bulk Charge
GREEN Flashing	BLUE Flashing	Absorption Charge
Solid GREEN	BLUE Flashing	Equalization Charge
Solid GREEN	Solid BLUE	Float Charge



Vin/Chassis 6H3AVAN01KM000002
Chassis RC1018-89 DOM Jan-19

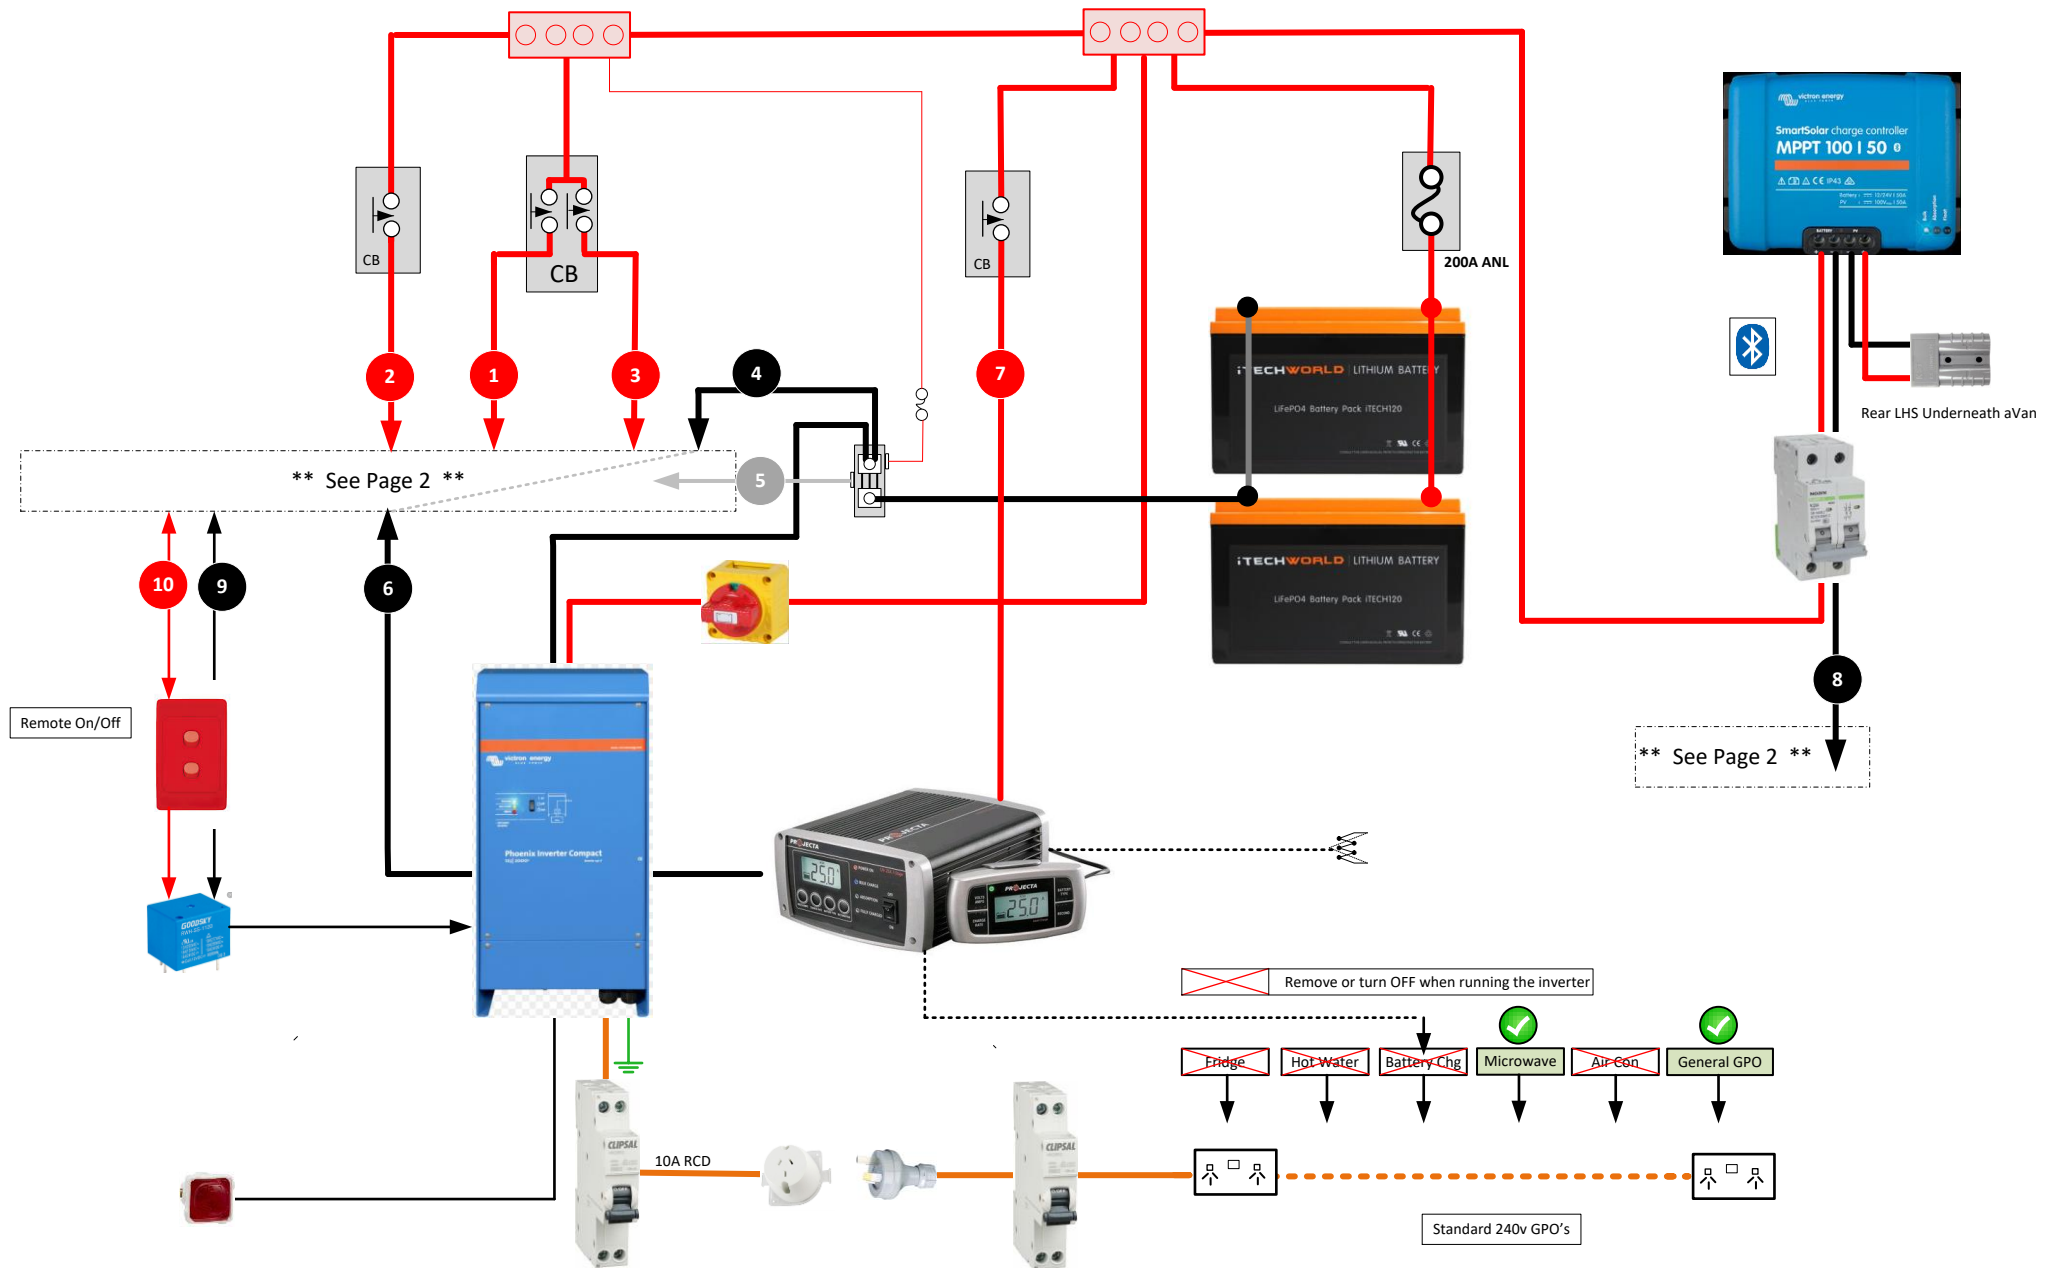


Aliner 1D Adventure Pack Plus - 12v Electrical Wiring		
Drawn By Chris James 10/12/2021	Modifications: LiFePo4 Batteries, Victron 2000w 12v Sine wave inverter and Victron MPPT Solar Charger added.	Vin/Chassis 6H3AVAN01KM000002 Chassis RC1018-89 DOM Jan-19

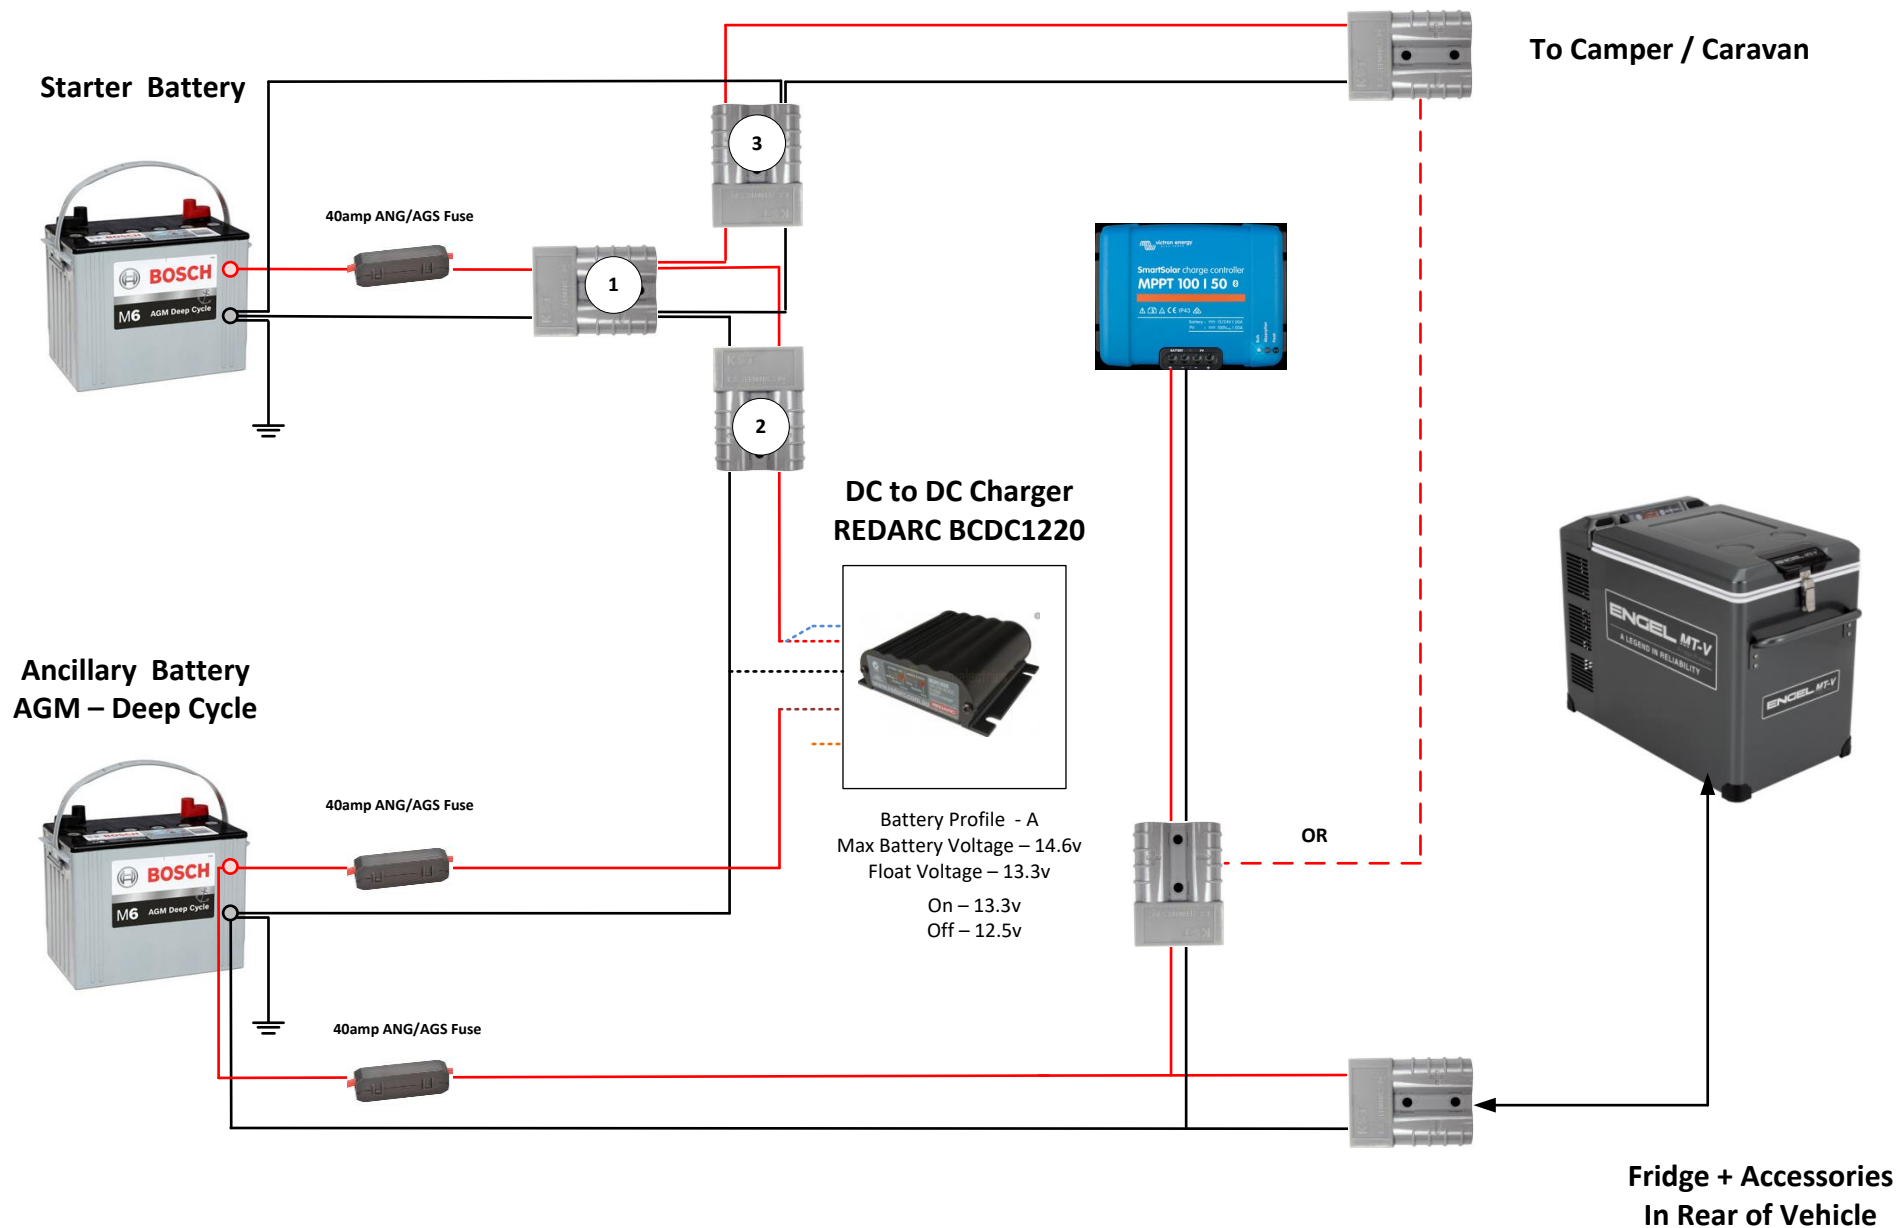


 Toyota Land Cruiser Prado - Additional 12v Wiring		
Drawn By Chris James 10/11/2019		

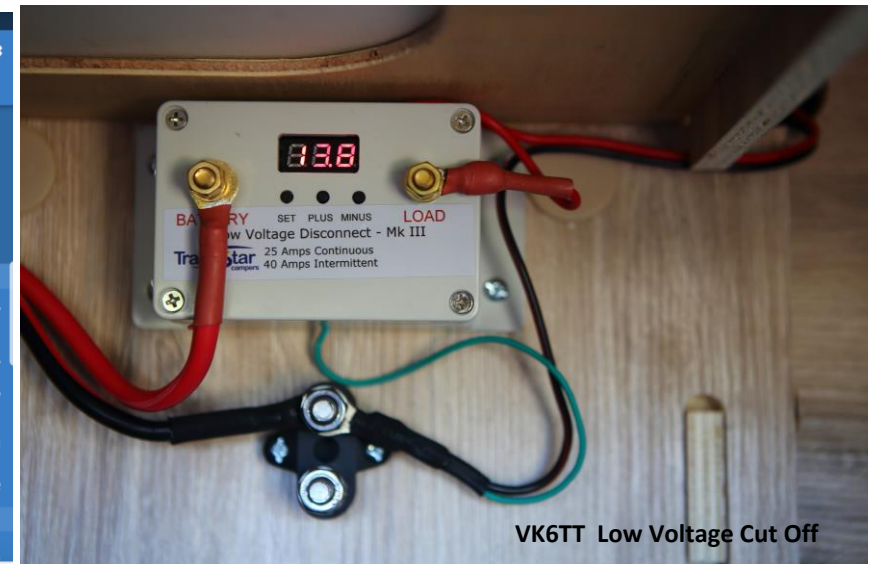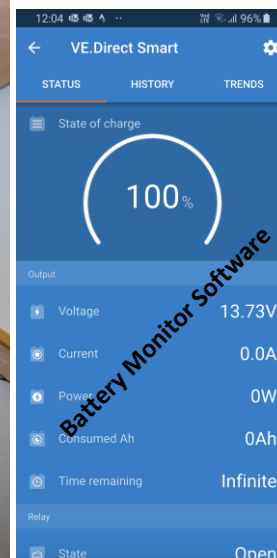

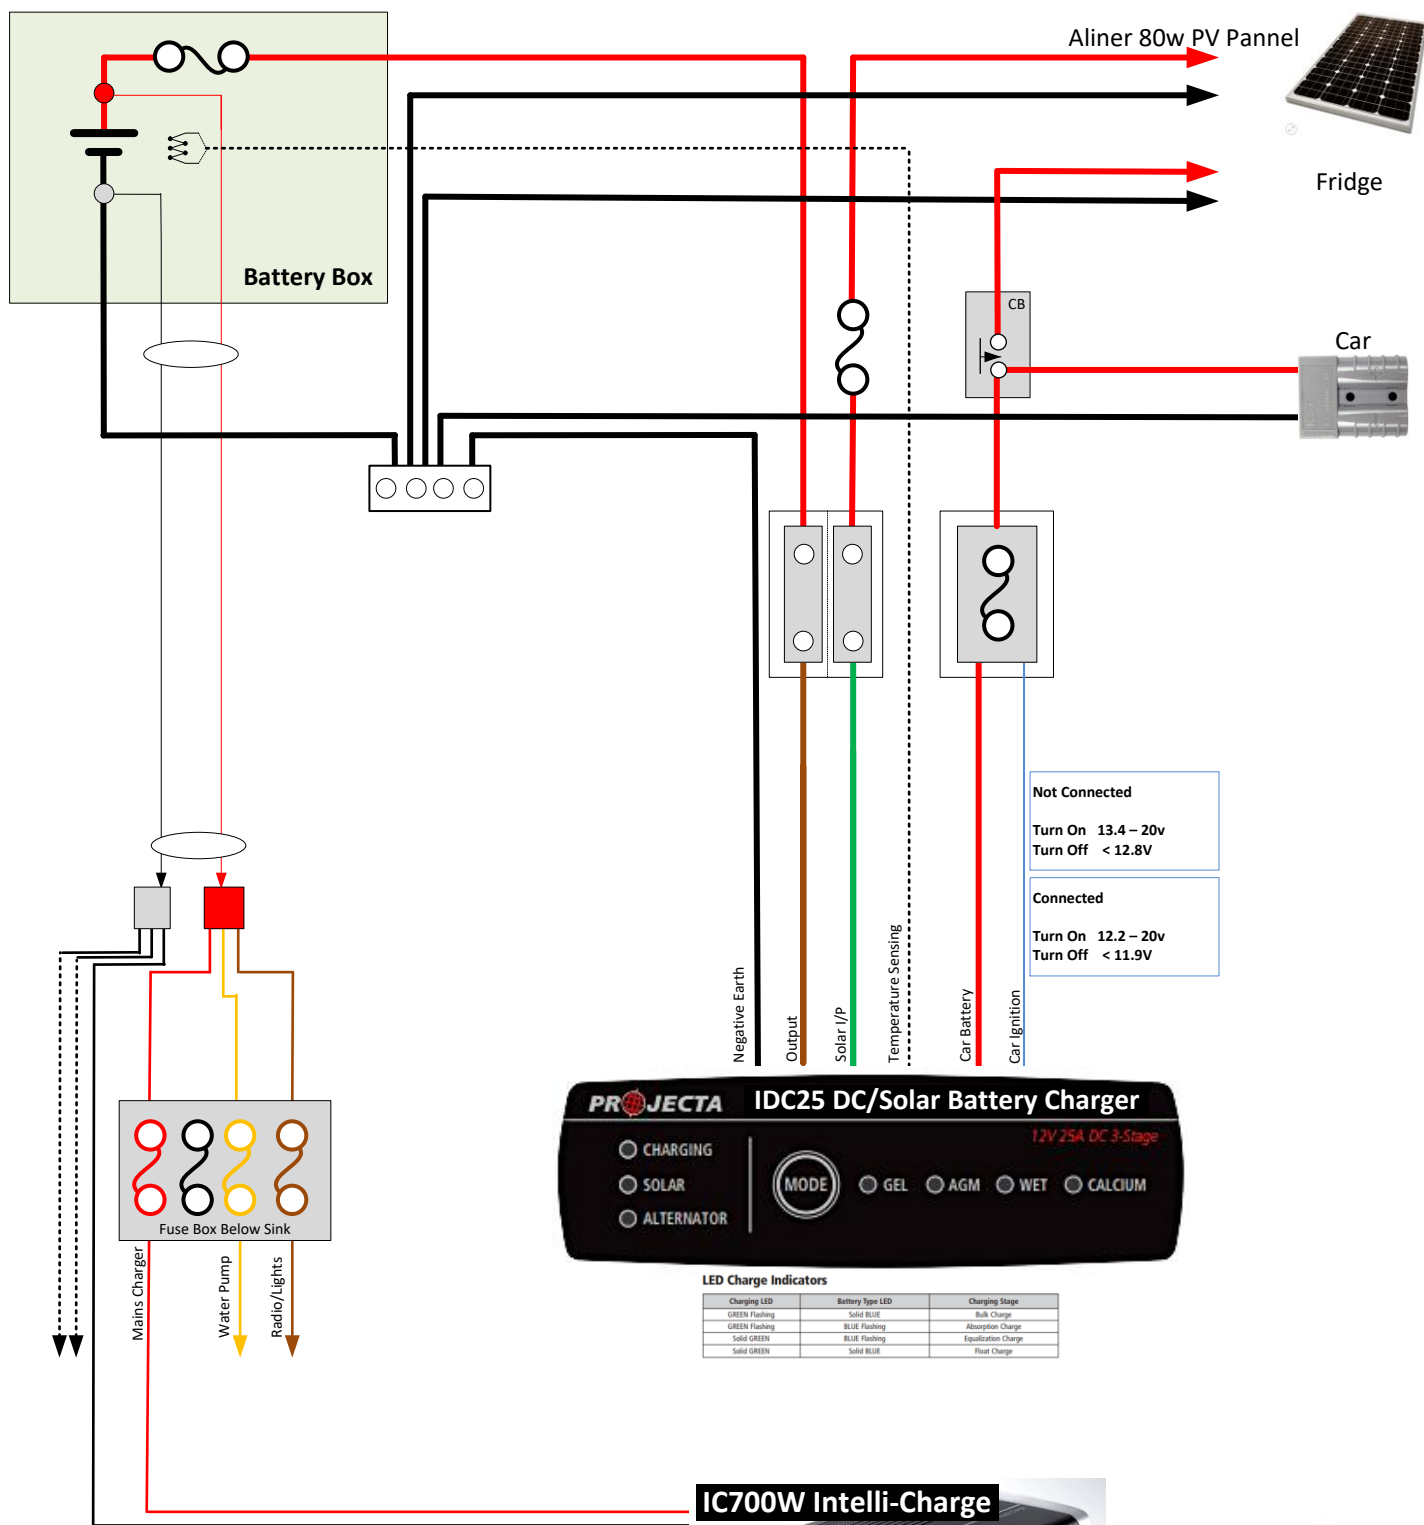

IC700W Intelli-Charge

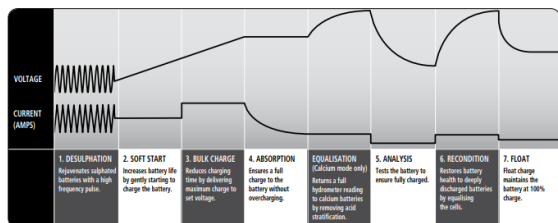


	Desulphation	Soft Start	Bulk	Absorption/Equalization	Analysis	Reconciliation	Float
Red LED	Power						
Blue LED	Charging	 (Fast Flash)	--- (Slow Flash)				
Green LED	Full						

Aliner 1D Adventure Pack Plus - 12v Electrical Wiring

Drawn By Chris James 08/06/2019

Original Wiring

Vin/Chassis 6H3AVAN01KM000002
Chassis RC1018-89 DOM Jan-19

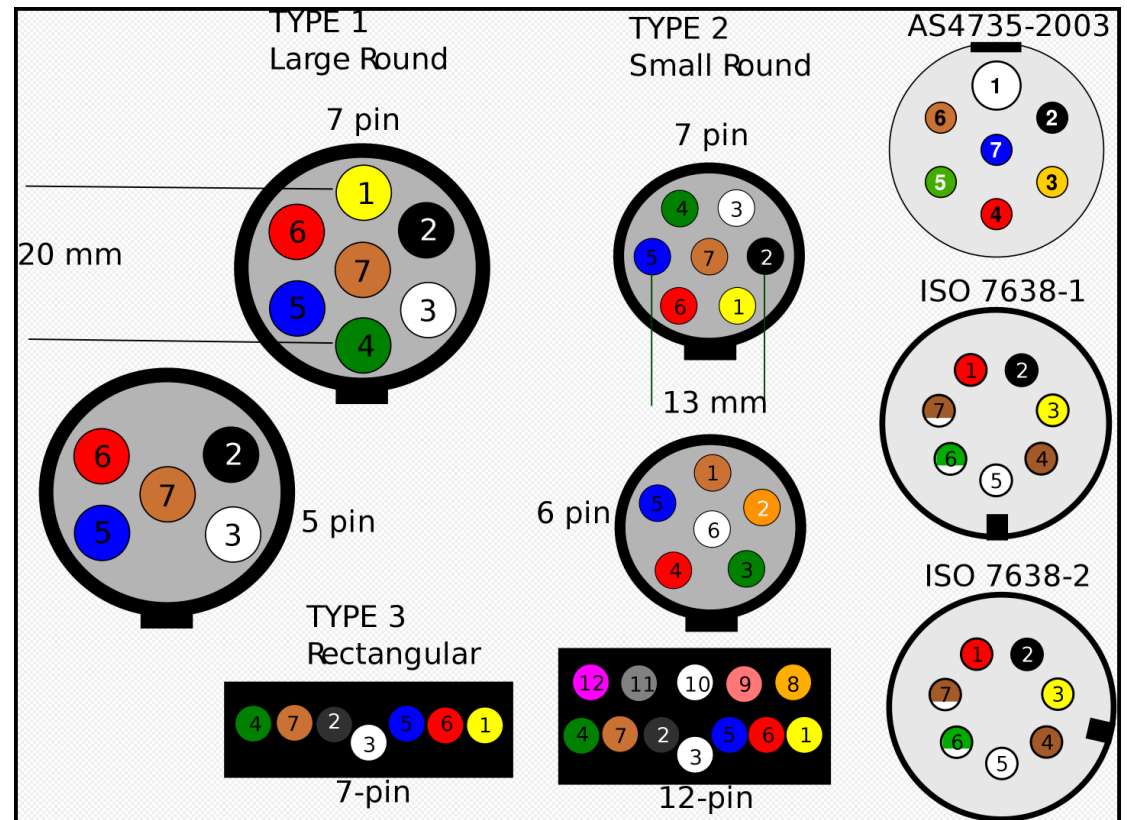

Pin No.	Circuit	Colour
1	Left-Hand Turn	Yellow
2	Reversing Signal	Black
3	Earth Return	White
4	Right-Hand Turn	Green
5	Service Brakes	Blue
6	Stop Lamps	Red
7	Rear Lamps, Clearance & Side Marker Lamps	Brown
8	Battery Charger/Winch	Orange
9	Auxiliaries/Battery Lead	Pink
10	Earth Return	White
11	Rear Fog Lamp	Grey
12	Auxiliaries	Violet

Trailer Plug Wiring